

Unitron a/s




Danish innovation
& produced
in Denmark

SAVE
UP TO
50%
ON ENERGY





**UniHeater &
UniComfort**

Can your piglets keep warm?

You get piglets that use the energy on growing instead of keeping warm

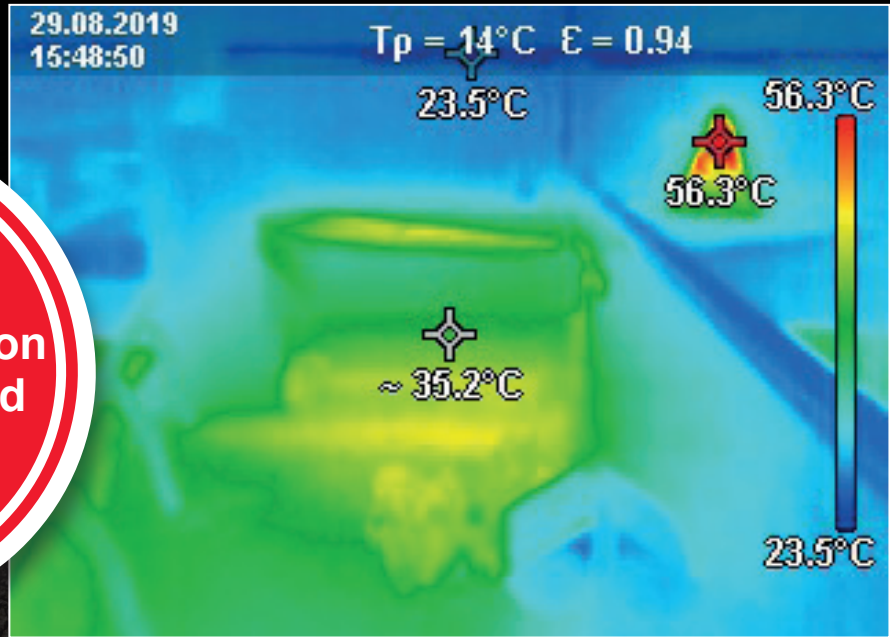

Less waste heat - use the energy in the nest area!

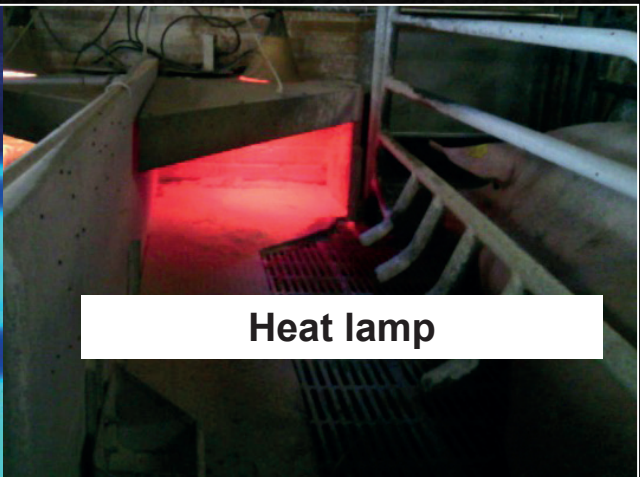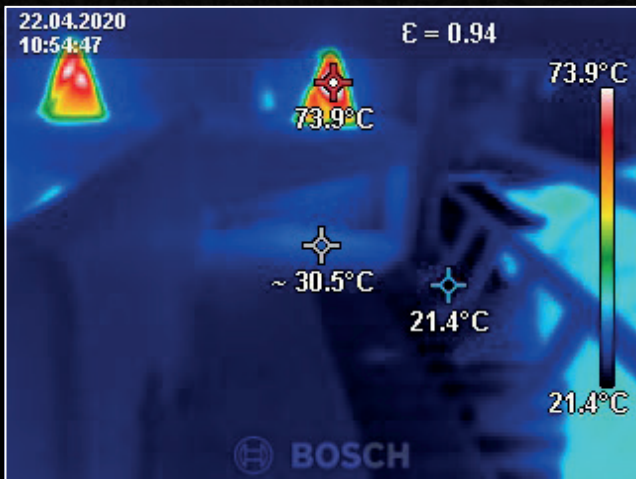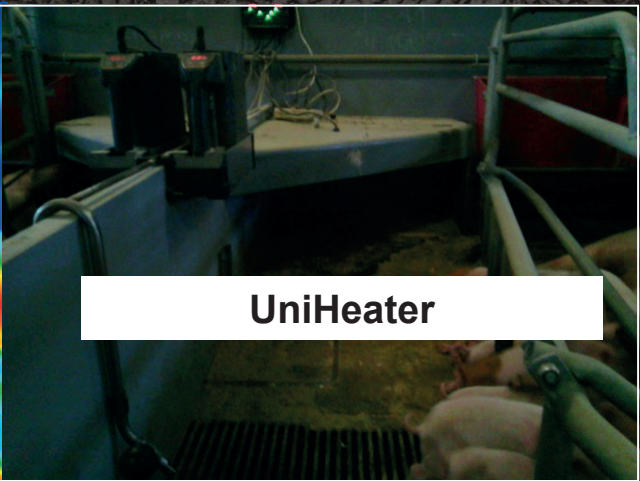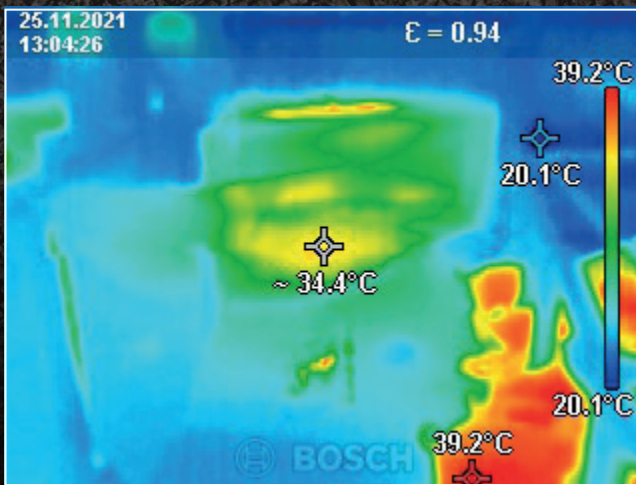

UniHeater

Best possible environment for the piglets, in combination with a durable product that fits modern pig production.

Heating element for mounting in the lid gives optimal climate for the piglets nest area by creating a heat blanket keeping all nest area warm.

The Heater:

- IR lamp 150W
- Strong Casing
- Stable mounting
- Comes with 2 meters cable without plug
- Stainless steel
- Build in safety fuse
- 240V ~ Max 2A
- IPX5
- L:590 mm W:140 mm. H:82 mm

Item number: 1126-2000



By using UniHeater and UniComfort you will improve the piglets nest area and also save energy and CO2

UniComfort

Management of microclimate in piglets nest area. The UniComfort regulates the installed heaters in 2 pens separately with 2 sensors.

UniComfort is designed together with UniHeater to control the temperature in the piglets nest area.

Keep the temperature stable for piglets in their critical life phase regardless of day/night or summer/winter influence.

UniComfort:

- UniComfort controls 2 pens individually with sensors
- Curve management from 35 degrees
- Possibility for 7, 10, 14, 21 day curve
- Easy daily regulation possible
- Turns off heaters automatically after ending curve program
- Possibility for fixed curve
- Continues temp measurement (shown in display)
- 2 meters sensor cable as standard
- Max power of 300W – 150W per channel
- 110-230Vac
- Max 5 bar with high pressure cleaners

Item number: 1411-4000



MUST BE MOUNTED DIRECTLY UNDER THE LID OF THE NEST AREA!
L:590 x W:140 x H:82 mm - 2 meters cable

**UNI-
HEATER**

Efficient heat curtain for even heat (150W)	✓
Top isolated 30 mm - expected heat deviation to room ~ 35° C	✓
Isolated built-in fire protection	✓
Recycled plastic (PA 66 + 30% glass) - non-conductive	✓
Stainless steel heater	✓

MOUNTED BETWEEN THE HEATER AND POWER SUPPLY

**UNI-
COMFORT**

Thermostat - sensor that measures the nest area	✓
Curve control from 35°C	✓
Automatic stop at the end of the curve - continued temperature display	✓
Can be washed with low pressure	✓
Max 300W - 150W per channel	✓
Save energy/CO2 from day 4-10! up to 50%	✓



CONTACT:

Co-owner & CEO
Allan Staub Jensen
allan@unitron.dk

Co-owner
Ib Amstrup
ib@unitron.dk

FarmSupply Pig:
Area Export Manager
Alexey Shein
alex@unitron.dk

Jan Volmer
jan@unitron.dk

Ellen Møller Hansen
ellen@unitron.dk

